



THOMSON

TEO - 8-inch tablet
SLIM DESIGN

mythomson.com



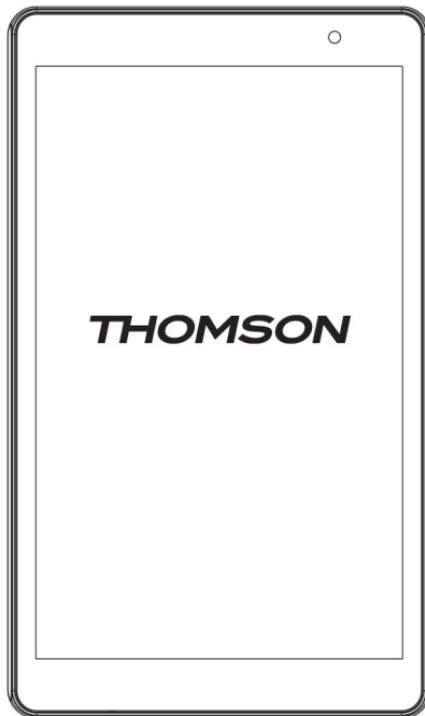




TABLE OF CONTENTS

Safety & Regulatory Statements.....	2
Safety Precautions.....	2
Legal and Trademark Notices	3
Box Contents.....	4
Features.....	4
Unit at a Glance	5
Getting Started.....	6
About Applications.....	6
Connecting to the Internet	7
Email	8
Transferring Files	9
Troubleshooting	10





SAFETY & REGULATORY STATEMENTS

	CAUTION	
	WARNING SHOCK HAZARD. DO NOT OPEN. AVIS RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.



For recycling or disposal information about this product, please contact your local authorities.

ⓘ **WARNING:** To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet. Protect your hearing: Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice. Note: If the product suddenly has no response or powers off, an electrostatic discharge may be the cause. In this circumstance, please follow the procedures below for recovery: Turn off the unit by pushing and holding the slide button at the right (Power off/Power off position) for 15 seconds.

ⓘ Turn on the unit again



At full volume, prolonged listening to the portable audio device may damage the user's hearing.

SAFETY PRECAUTIONS

1. Please protect the device away against moisture and dust.
2. Do not leave the device in a high-temperature environment, especially a closed car in hot weather.
3. Do not drop or strike the device.
4. Do not shake the device violently, particularly the LCD screen, as this may cause the display to malfunction.
5. Please make sure to carefully adjust the earphone volume; excessive volume may be harmful to your hearing.
6. Please charge the device when
 - The power icon shows that the battery is nearly flat
 - The device turns itself off automatically and will not come back on.
 - There is no response when operating the buttons.





- ⓘ *Attention: Please use only the charger provided by the manufacturer; other chargers may damage the device.*
7. Do not disconnect the device from your PC when downloading, uploading or formatting as this may cause programming errors in the device.
 8. Do not disassemble the device yourself; only allow an expert to do so.
 9. Do not use alcohol, thinner or benzene-based chemicals to clean the surface of the device.
 10. Do not use the device in places where its use is prohibited, like aircraft.
 11. Please make sure to always back up your device. The manufacturer is not responsible for lost files or data after damage to or repair of the device.
 12. The manufacturer reserves all the rights to the technology and design of the device and has no obligation to inform the user if new versions or designs have been developed.
 13. The device is NOT waterproof; please keep it away from moisture at all times.
 14. This device will take approximately 20 seconds to power up; please don't try to operate the device during this period.

LEGAL AND TRADEMARK NOTICES

This product has been manufactured and sold under the responsibility of METAVISIO.

THOMSON, and the THOMSON logo are trademarks used under license by METAVISIO - further information at www.thomson-brand.com.

Google, Android, Google Play, YouTube and other marks are trademarks of Google LLC.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.





BOX CONTENTS

1. A THOMSON tablet
2. A user manual
3. A power USB charger
4. A micro USB cable




FEATURES

- Browse the Web.
Visit your favorite websites
- Check your e-mail
Keep in touch with friends and family
- Watch YouTube videos
Browse the world's most popular videosharing community
- Discover thousands of apps for Android
Games, applications, and more with Google Play
- Connect to the Internet wirelessly
High-speed Wi-Fi 802.11 AC/b/g/n networking
- Enjoy your media library anywhere
- Portable powerhouse plays popular music, video, and photo formats
- microSD memory card reader
Increase your storage capacity (up to 512 GB supported)
- Built-in camera
Convenient front-facing (5M) and rear camera (8MP)
- Automatic orientation detection
Read any way you want; the display adjusts automatically!
- Streaming video quality will be affected by the source, and the quality and condition of your network connection.



UNIT AT A GLANCE

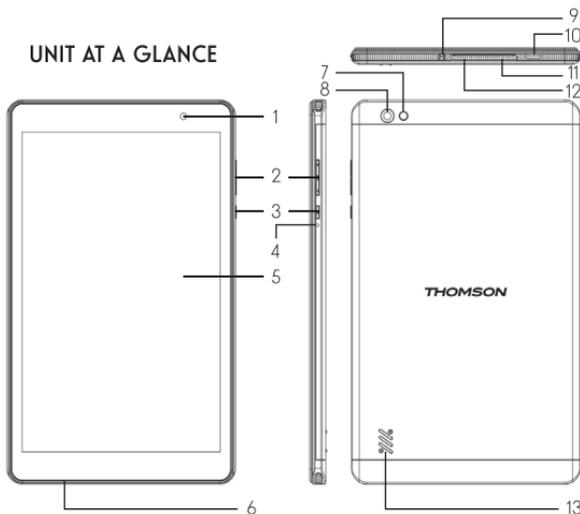

1. Camera

Use it to take pictures or capture videos.

2. VOL+ /VOL-

Press VOL+ to increase the volume level.
Press VOL- to decrease the volume level.

3. Power

Press to turn the unit on, or to turn the screen on or off.

Press and hold to access the Power Off menu.

4. Reset

Press this button to force off the system when the device is halted.

5. Screen

6. Microphone

7. Flash

8. Camera

Use it to take pictures or capture videos.

9. Headphone

Audio output connection for headphones.

10. USB Type-C port

This new-generation USB port has the particularity of being versatile, since it allows data, video and audio streams, and energy to be transmitted. The use of an adapter (not supplied) will be necessary to use some of the connector's features.

11. Micro SD-CARD slot

Load external Micro SD-cards here.

12. Micro Sim slot

13. Speaker





GETTING STARTED


Turning the Tablet on or off

To turn the tablet on:

Press and hold the Power key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the Power key until the power off menu appears.

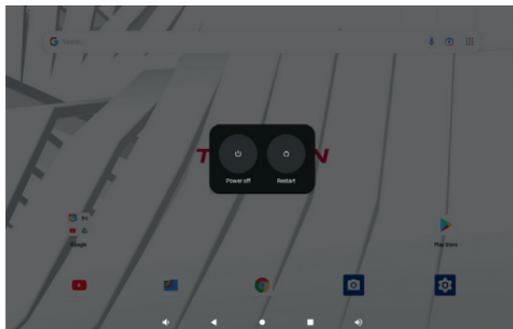

2. Touch the screen "Power off" to turn off the tablet

Turning the Screen On or off (standby)


When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.

- ① To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This screen timeout option can be found in the display menu.

ABOUT APPLICATIONS

To open an application, touch the application icon on the home screen or in the Launcher where you can swipe up the icon on the home screen to get in.

Launcher screen:

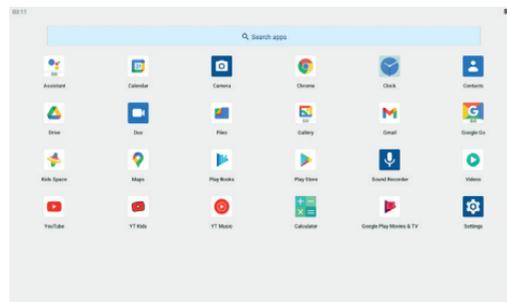

- ① The screen show above is for illustrative purposes only. Reserves the right to modify and improve the final list of applications available on the tablet.





Preinstalled Applications

Some applications have been installed on your tablet for your convenience.

These applications include:



Browse the web



Perform simple mathematical operations



Take pictures or videos with the front facing camera



Check your e-mail.



Access the Settings menu to adjust the tablet's options.

Installing Applications

You can also download an install additional from the device's applications marketplace, the web browser or other sources.


The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the Application settings menu.

CONNECTING TO THE INTERNET

Connecting to Wireless Internet

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Touch Settings > Network > Wi-Fi.

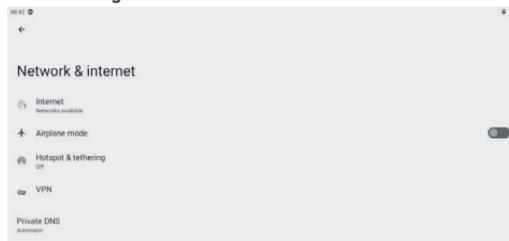


1. Check Wi-Fi to turn it on. The tablet scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.





2. Touch a network to connect to it. If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**. If the network is secured, you're prompted to enter a password or other credentials. To manually add a network, select the **Add Network** button.

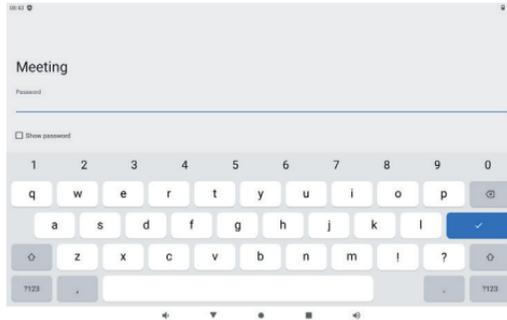

EMAIL

Setting Up an Email account

1. Press **Gmail** icon under **App** menu.



2. Press **Add an email address**, enter your email address, press **Next**, then input password. If this does not work, you will need to manually configure your account. Before attempting to configure manually, re-enter your email and password to make sure they are correct.

Manually Configuring an Email account

It is recommended to consult an IT professional before attempting to manually configure your email address.

1. To set up your email manually, detailed information is required. Check your provider's website or phone support for individual provider information.






2. The first thing you will need to determine is the server type. While most servers are POP3, IMAP and Exchange are also supported services.
3. Enter your email address and password then press Next.
4. Fill in all information for the Incoming server portion of the manual setup.
5. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.
6. Fill in all information for the Outgoing server settings.
7. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.

TRANSFERRING FILES

Transferring Files with a Computer

To begin transferring files to your computer, plug one end of the included Mini-USB to USB cord into the unit, and the other into the USB port on a computer.

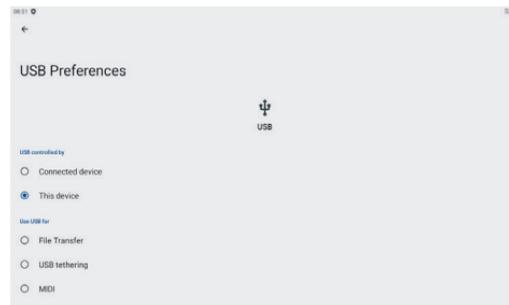

You will now be able to transfer files





TROUBLESHOOTING

Device can not connect to Wi-Fi

Ensure the wireless network is working by testing it using another wireless device.

Ensure the device and the wireless router is within the range of the wireless network to be connected too.Walls or other obstructions will reduce the possible distances between wireless devices.

Ensure the security password being used is correct.

8. Device doesn't turn on

You can not turn on the device when the battery charge is below the critical level,please charge the battery.

Use a needle or paper clip to reset unit on the side of the device and check if it is restarting is normally or not.

Check if the charger is connected correctly.

9. Heat Issues

When running multiple applications,using the screen on its brightest setting, or when being charged,this device can get quite hot.This is normal and should nor cause any inconvenience when in use.

10. System has anomalies and doesn't work correctly

Installing some third-party applications may cause the system not to operate correctly.Press the RESET button and perform a system reset to resolve this issue.

11. Cannot set E-mail Account or registration application

Ensure that the MID is connected to a Wi-Fi network and can connect to the Internet.

Ensure you E-mail settings have been entered correctly for the account being accessed.

Make sure your system time and local time are correct.

12. Can not record

Use a needle or paper clip to reset unit on the side of the device,then check if the record function works correctly.

13. The stand-by time of the device is too short

The duration of the lithium battery varies with environmental temperature changes and the service conditions.If the environment temperature is too low or too high,the duration of the battery will be affected.It is recommended to use this device at normal temperature.

Battery life is dependent on usage. High volume WIFI and the frequent use may cause the battery to be drained at a higher rate.

14. No sound via earphone

Please check if the volume setting is 0.

Please check if audio file is broken,and try to play another audio file to confirm.If the audio file is broken,it may cause severe noise or static.

15. The color distortion of video or picture display





Use a needle or paper clip to reset unit on the back of the device to solve this issue.

16. Can not copy files

Please check if the device is connected to the computer correctly.

Please check if the memory space is full.

Please check if the USB cable is broken.

17. Other troubles Please follow up the steps as below to fix the other troubles before you return the MID/Tablet PC to us:

Step1 : Use a needle or paper clip to reset unit on the side of the device,then check if the function works correctly

Step2 : Upgrade the firmware from the PC and restart the device and then check if the function works correctly



THOMSON

TEO - 8-inch tablet
SLIM DESIGN

mythomson.com

